

EZ TouchPLC Jr.™ 28 I/O Wiring Connections


Cables and Accessories

Model Number	Interface	Price
EZ-LINK-JTPLC-28IO	28 I/O Terminal Extension Board for Jr. Touch PLC	
EZ-CBL-JTPLC-28IO	Connector Cable for 28 I/O Terminal Extension Board for Jr. Touch PLC	


28I/O PIN Configuration

44 PIN CONNECTOR	
PIN NUMBER	PIN FUNCTION
1	DC SOURCE INPUT 1
2	DC SOURCE INPUT 2
3	DC SOURCE INPUT 3
4	DC SOURCE INPUT 4
5	DC SOURCE INPUT 5
6	DC SOURCE INPUT 6
7	DC SOURCE INPUT 7
8	DC SOURCE INPUT 8
9	COM
10	DC SOURCE INPUT 1
11	DC SOURCE INPUT 2
12	DC SOURCE INPUT 3
13	DC SOURCE INPUT 4
14	DC SOURCE INPUT 5
15	DC SOURCE INPUT 6
16	DC SOURCE INPUT 7
17	DC SOURCE INPUT 8
18	COM
19	DC SOURCE OUTPUT 1
20	DC SOURCE OUTPUT 2
21	DC SOURCE OUTPUT 3
22	DC SOURCE OUTPUT 4
23	DC SOURCE OUTPUT 5
24	DC SOURCE OUTPUT 6
25	DC SOURCE OUTPUT 7
26	DC SOURCE OUTPUT 8
27	COM
28	ANALOG OUT (CURRENT) 1
29	ANALOG OUT (CURRENT) 2
30	ANALOG OUT (VOLTAGE) 1
31	ANALOG OUT (VOLTAGE) 2
32	ANALOG GND
33	ANALOG IN (VOLTAGE) 1
34	ANALOG IN (VOLTAGE) 2
35	ANALOG IN (CURRENT) 1
36	ANALOG IN (CURRENT) 2
37	COM
38	SUPPLY INPUT (10 TO 28VDC)
39	SUPPLY INPUT (10 TO 28VDC)
40	N.C
41	SUPPLY COM
42	SUPPLY COM
43	-
44	-

Female D-Sub connector on Jr. TouchPLC Unit

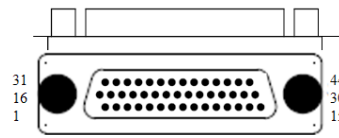

Male D-Sub connector from the Terminal Extension Board cable



28 I/O Terminal Extension Board

